

---

## Packing

AML motors are vacuum sealed packaged. Wear gloves to remove the motor from its vacuum packaging. Once removed it must be stored in a cleanroom or clean, closed container.

---