

---

## Reversal of Rotation

There is a 50% probability that the direction of rotation will be reversed from the desired or conventional sense. To reverse the direction, exchange the connections to one of the phases.

Check that the drive, wiring and motor combination work properly before closing the vacuum system.

---