
Installation

Use the four holes in the front flange for mounting using the fixings of your choice. The location spigot projecting from the face of the motor is accurately concentric with the shaft and intended for precise location in a recess.

Take normal vacuum precautions, avoid creating trapped volumes when mounting the motor and obstruct as few as possible of the pumping holes in the end faces.

Warranty is void if screws are tampered with.
