

---

## Maintenance and service

The SMD4 contains no user-serviceable parts.

### **Cleaning**

If the instrument requires cleaning, disconnect the power and all other connections, and wipe it down with a cloth slightly dampened with water or a mild detergent.

---